

## Losi DBXL Team Twisted RC Throttle Bell Crank Install Instructions

1. Remove the stock Losi Throttle Bell crank.
2. Prepare to install Team Twisted RC DBXL throttle crank



3. Take the long linkage (the one that goes to the throttle on the carb) and place it under the long arm of the TTRC bell crank



4. Insert the bolt from underneath and thread into the TTRC bell crank crank
5. Hand tighten, then loosen a quarter turn
6. Use the nut provided, and thread on top of the TTRC bell crank. Using the Allen wrench to hold the screw in place, tighten down the nut to lock screw in place. It should look like this




7. Take the short linkage (the one that goes from the servo to the bell crank) and put on top of the TTRC bell crank
8. Thread the screw into the TTRC bell crank from the top, tighten by hand, then loosen a quarter turn
9. Use the last nut to lock screw in place as you did before on the long linkage side
10. Your TTRC bell crank should now look like this



11. Begin to install on LOSI DBXL by inserting the short linkage into the servo end first, like so



12. Hook the long linkage into your throttle arm on the carb
13. Now take the shim washer and place on the post that the original bell crank sat

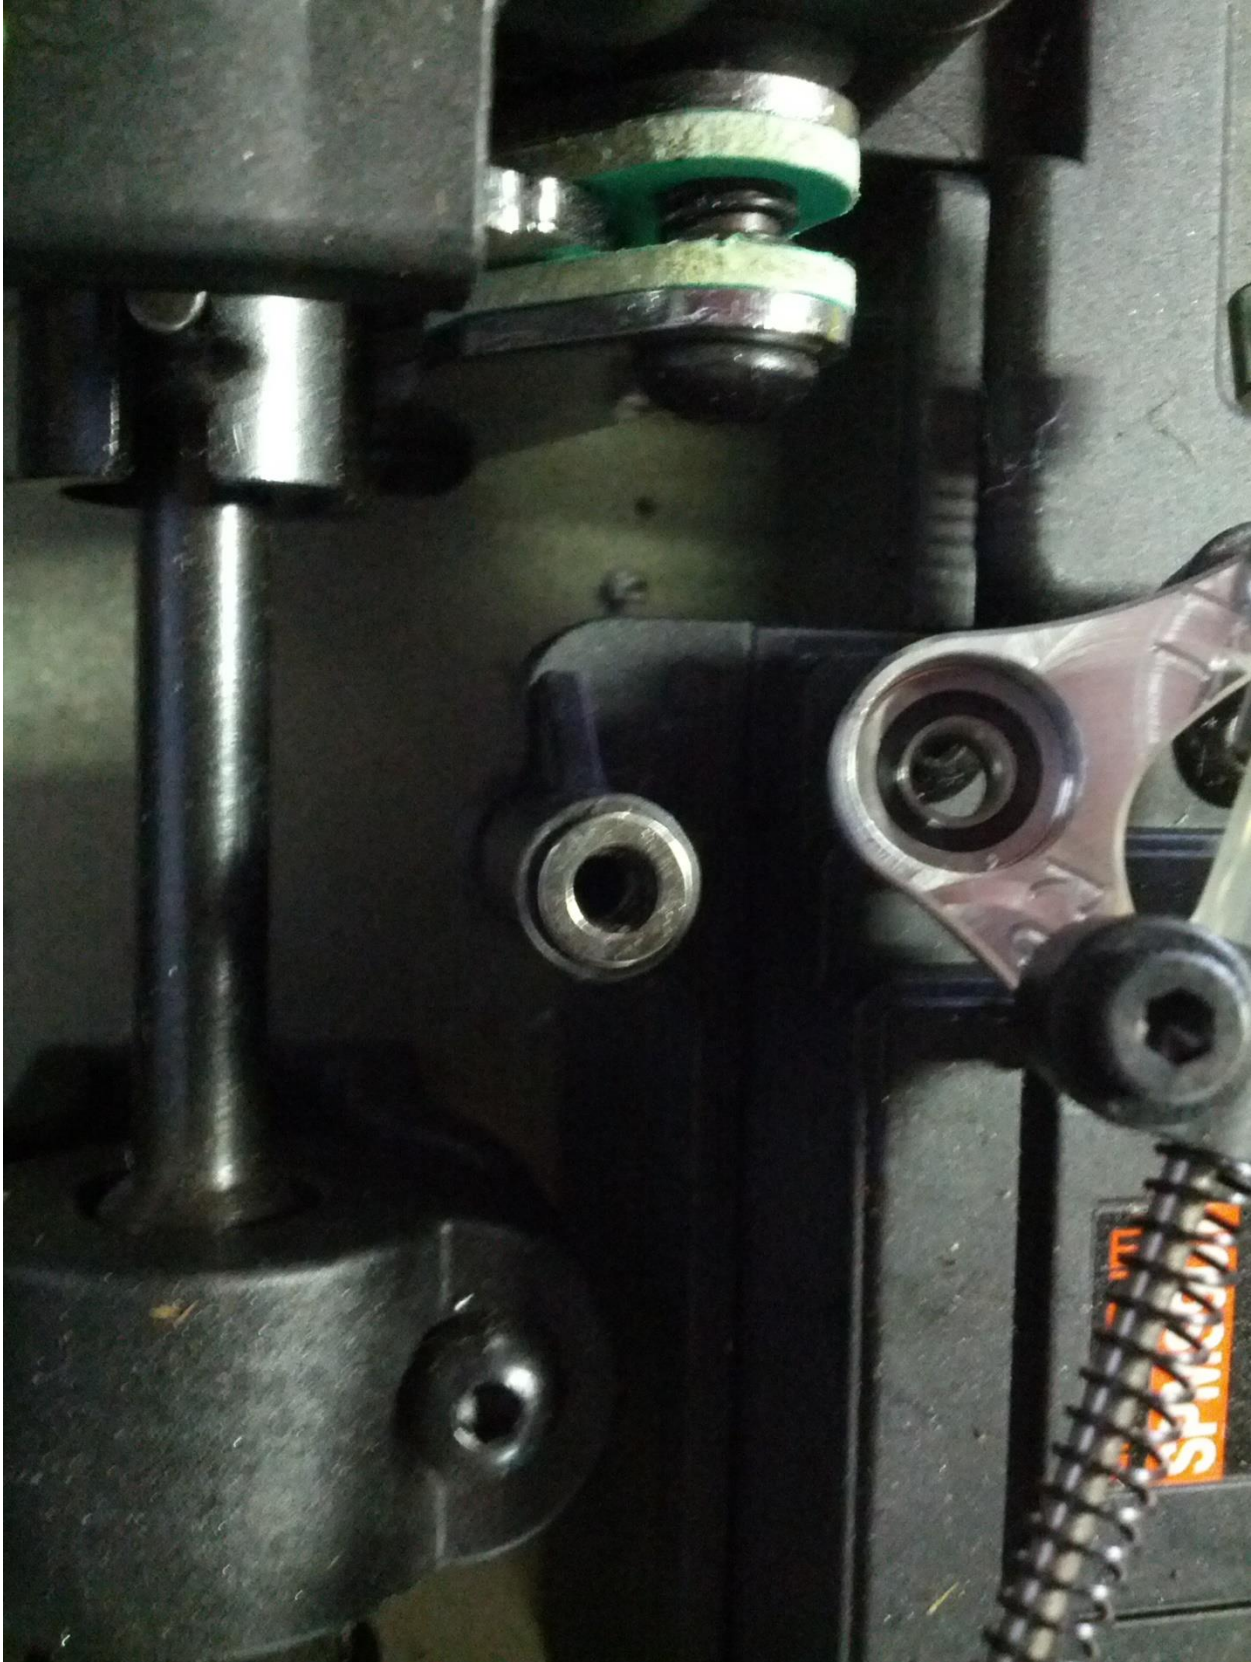

14. Use the original bell crank's screw and tighten the TTRC bell crank down



15. Your DBXL is now ready for use